

aura
roboclean
Pro




MODEL
S PLUS
114K

► USER MANUAL

CE



GERMAN DESIGN AWARD WINNER 2018

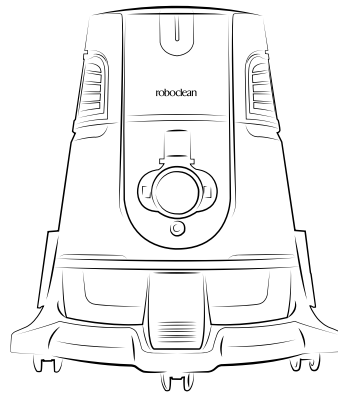



Dear Customer,

Congratulations on your purchase of an AURA ROBOCLEAN SPLUS.

You have made a great decision for the health of your family.

We recommend that you read this User Manual thoroughly and retain it for future reference in order to use your product as effectively as possible.

By owning this product:

- You can remove dust and mites from every corner of your home, as well as furniture such as carpets, sofas, beds and other materials and surfaces.
- You can freshen up your house with Aura's selection of fragrances,
- You can refresh the air inside your home with the ionizer function.

roboclean
SPLUS

Important safety instructions

Please read all instructions before using this appliance.

! WARNING

To reduce the risk of electric shock use indoors use only.

! WARNING

To reduce the risk of fire, electric shock, or injury, when using an electrical appliance, basic precautions should always be followed.

Save These Instructions

- This appliance is intended for household use only. Do not use outdoors and on wet surfaces.
- Check whether your power supply conforms with the voltage indicated on the technical information label before plugging in your appliance.
- Use this appliance only as described in this manual. Use only manufacturer's recommended attachments.
- This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- This appliance does not need to be grounded, it can be used safely on every outlet.
- Always check whether the appliance or power cord is damaged before operating your appliance. If there is any damage, do not operate your appliance and contact the nearest Authorized Service Provider.
- Do not leave the appliance plugged in when it is not in use. Turn your appliance off before unplugging it. Do not pull the cord to unplug the unit as this can result in damage to the outlet and the plug.
- Your appliance is equipped with a cord rewinding mechanism. Do not forcefully push in the cord, do not operate this mechanism when it is not necessary and do not allow children to play with it. Hold the plug when rewinding onto cord reel. Keep the plug from rewinding forcefully and uncontrollably by firmly holding on to it while rewinding.
- Do not move your appliance by pulling its power cord. Ensure that the power cord is not trapped by a door or other objects and kept away from sharp edges and hot surfaces.
- The power cord should be monitored regularly. An appliance with a damaged power cord should not be used. If the power cord is damaged, it should be replaced with a specially prepared cord or cord set procured from the manufacturer or authorized service provider. This operation should always be performed by an authorized service provider.
- Do not allow the device to be used as a toy. Close attention is necessary when used by or near children.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from opening and moving parts.
- Use extra care when cleaning on stairs.
- Do not vacuum any burning or smoking objects such as cigarettes, matchsticks, embers or hot ashes. Do not use your appliance to clean up flammable or combustible liquids such as fuel or use it anywhere where these materials may be present.
- Never use your appliance to clean out a fireplace, flue or the inside of any duct not limited to those as oil, soot, ceramic powder, lime, plaster, sheetrock dust, etc.
- Never use your appliance to clean up volatile or toxic substances or anywhere near these substances.
- Always check whether the separator on the motor of your appliance is installed correctly in its place after being cleaned. Never operate your appliance without the separator, water or pollen filter.
- Your appliance is equipped with a motor protection thermal switch that prevents overheating and damage of the Power Nozzle motor. This function stops and protects the motor when an object gets caught in the Power Nozzle brush, the brush is excessively dirty or strained. Do not worry if the appliance suddenly stops; unplug the appliance and remove the objects straining the motor and continue using your appliance.
- Do not use the Power Nozzle on wet surfaces and cleaning up water or other liquids. Only use it for cleaning up dry surfaces and objects.
- Always turn off the appliance before connecting or disconnecting either hose or power nozzle.
- Always unplug your appliance before cleaning or performing maintenance on it. Turn off all controls before unplugging.
- The hose contains electrical wires. Do not use when damaged, cut, or punctured. Avoid picking up sharp objects. Do not allow your vacuum hose to come in contact with water as there is a live current running through it.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not attempt to repair your appliance in case of a functional disorder or if any adverse condition is suspected. Contact an Authorized Service Provider for assistance.



aura
robooclean



roboclean
Pro

Premium features of your appliance

- 1 Dust bag free, water filtration system that retains 99.99% of dust with its specially designed separator and water basin.
- 2 Uninterrupted suction power with its non-blocking water filtration system.
- 3 Special deep cleaning tool with brushed helical cylinder, operating with a electrical motor which is power of 150 Watts.
- 4 Rich variety of tools designed for different functions suitable for any type of cleaning.
- 5 4-in-1 appliance with the following functions: ionizer, aromatizer, vacuum cleaner and deep cleaner.
- 6 Ergonomic design.
- 7 Easy set up and operation.

TECHNICAL SPECIFICATIONS

Suction Motor Power Rate	: 900 Watt
Voltage	: 220-240V AC, 50-60 Hz
Suction Flow Rate	: 200 m ³ / h
Suction Pressure	: 1900 mmSS (190 mbar)
Dirty Water Basin Capacity	: 1.8 L
Clean Water Basin Capacity	: 3.6 L
Power Nozzle Motor Power	: 150 Watt
Insulation Class:	: II

SPEED (rpm)

1st Step : 7.500	6th Step : 15.000
2nd Step : 9.000	7th Step : 16.500
3rd Step : 10.500	8th Step : 18.000
4th Step : 12.000	9th Step : 19.000
5th Step : 13.500	





BODY ASSEMBLY

- 1- Touchscreen Control Panel
- 2- On/Off Button
- 3- Handle
- 4- Power Nozzle Outlet Cover
- 5- Power Nozzle Power Outlet
- 6- Suction Nozzle Port
- 7- Power Cord
- 8- Rear Panel Cover
- 9- Ion Outlet Channel
- 10- Separator
- 11- Separator Nut
- 12- Separator Cleaning Brush
- 13- Pollen Filter
- 14- Safety Switch Mechanism
- 15- Locking Latches
- 16- Basin Leds
- 17- Dolly
- 18- Clean Water Basin
- 19- Dirty Water Basin



18

 


19



ACCESSORIES


- 1- Power Nozzle
- 2- Power Nozzle Joint
- 3- Joint Fixing Latch
- 4- Power Nozzle Cord
- 5- Trigger Handle & Hose
- 6- Trigger
- 7- Trigger Control Panel
- 8- Control Securing Latch
- 9- Telescopic Tube Adaptor
- 10- Hose Adaptor
- 11- Remote Control
- 12- Carpet And Hard Floor Nozzle
- 13- Hard Floor Nozzle (Alternative)
- 14- Cord Retaining Clamp
- 15- Fragrance Set
- 16- Vacuum Bag
- 17- Telescopic Tube
- 18- Upholstery Tool
- 19- Easy Access Tool
- 20- Circular Brush
- 21- Inflator & Vacuuming Tool
- 22- Crevice Tool



17



 18



19



20



21



22



Installation and operation of the Roboclean

TOUCHSCREEN CONTROL PANEL

(⏻) ON/OFF: You can start or stop your appliance by touching this symbol for 1 second.

This symbol will glow white which indicates standby position when the appliance is plugged in and will glow red during operation.

(F) SLIDER: You can set the suction power in 9 different levels by moving your finger up and down on the slider switch or you may switch to the desired level by a single touch.

(🌀) POWER NOZZLE: You can activate the deep cleaning function by touching this symbol.

(ION) IONIZER: You can activate the ionizing function by touching this symbol.

REMOTE CONTROL PANEL

You can use the remote control on the trigger assembly or separate from the trigger assembly. The remote should be removed by pulling the remote control retaining latch towards you.

When you want to place it on its housing again, slide the front side of the remote into the housing on the trigger first and press the rear side slightly.



ON/OFF

Suction power level buttons

Power Nozzle

Ionizer

LCD display







FILLING THE BASIN WITH WATER

1- Release the latches on both sides of the appliance.

Separate the main body from the water basin.

2- Fill the dirty water basin with clean water up to the top of the measuring post in its center. The water amount to be filled is about 1.8 L. (Please ensure that the water does not exceed the height of the measuring post).

! Do not operate the appliance without water.

3- Put the water-filled basin, into the clean water basin and place it on the dolly.

4- Secure the body to the dolly with the locking latches.

CONNECTING THE VACUUM HOSE TO THE BODY

5- Lift the outlet cover on the body upwards as shown in the figure.

6- Press the hose adaptor on the end of the vacuum hose into latches on the sides, and secure it on the body by pushing it so that the plugs and locks engage each other. Ensure that the tabs are locked by pulling the hose slightly.

7- To separate the vacuum hose from the body, press the clamps on both sides of the hose adaptor and pull the hose towards you.


! WARNING

This hose includes electrical connections;

- It should not be used for sucking up water or other liquids.
- It should not be immersed in water for cleaning.
- Hose should be checked regularly and should not be used if it is damaged.



Setting up the Power Nozzle

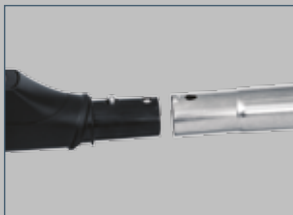


1- Install the telescopic tube to the tube adaptor on the end of the vacuum hose so that the locking pin is engaged.



2- Install the other side of the telescopic tube to the joint part of the Power Nozzle so that the locking pin is engaged.



3- Plug the Power Nozzle cord into the dual socket slot under the trigger arm.

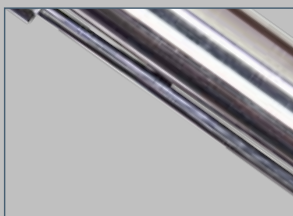

4- Install the cord retaining clamps to the telescopic tube equal distance from each other so that they hold the Power Nozzle cord. To adjust the length of the telescopic tube, push the button located at the center of the tube in the direction of the arrow and adjust the tube to the desired length.



5- Before starting to vacuum, press the joint retaining latch on the Power Nozzle to release the tube from upright position.



USAGE AND REWINDING OF THE POWER CORD

1- Unplug power cord by pulling it out of its housing.

2- After adjusting to the desired length and hearing it click, release it. This action will lock the cord and prevent it from getting pulled back into its housing. The red line on the cord indicates the end of the cord length. Do not pull the cord more when you see this sign.

3- After all connections are performed, plug in the appliance and bring it to the standby position.

4- If you want the cord to be pulled back into its housing, slightly pull and release it. Hold the cord in your hand to ensure that it is pulled back into its housing in a controlled manner.

5- Never let children play with the cord.



USAGE OF THE POWER NOZZLE

a. When you want to operate the appliance from the body control panel;

- Activate the suction motor by touching the [⏻] On/Off symbol.
- Activate the Power Nozzle by touching the [🌀] symbol. Press the same button when you want to stop it.

b. If you want to operate the appliance from the trigger control panel;

- Start the suction motor by pressing the On/Off button.
- Start the Power Nozzle by touching the [🌀]

button. Press the same button when you want to stop it.

When you activate the Power Nozzle, your appliance will begin operating at the maximum level automatically.

After you have completed vacuuming, stop the appliance by pressing the On/Off button on the remote control or touching the [⏻] On/Off symbol on the body and unplug the appliance.


Secure the telescopic tube by pushing it forward to bring it to the upright position when required.

! WARNING

- Do not use the Power Nozzle to suck up water or liquids and do not use it on wet surfaces.
- Do not use the Power Nozzle on leather surfaces, carpets made from animal hide, fur or hair, shaggy carpets, handmade rugs, Aloe Vera mattresses, and carpets made with soft fibers.
- It is not recommended to use the Power Nozzle to clean mattresses. It is recommended to clean mattresses with Roboclean Small Power Nozzle.
- Before using the Power Nozzle on any type of surface such as carpets, rugs, upholstery and mattresses; read

the user and owner care manuals of these products. The Power Nozzle may cause damage on surfaces that are not suitable to be cleaned with the Power Nozzle.

- In case the Power Nozzle becomes obstructed by bristles, fibers and/or other materials; do not attempt to use it before removing any of these obstructions. Clean the cylinder and resume operation.
- Make sure to unplug your Roboclean before performing any sort of cleaning or maintenance on it.
- Do not let children use your Roboclean device as a toy or operate it without supervision.

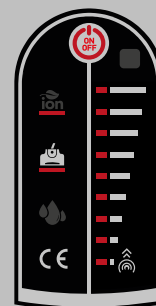

Installation and operation of other accessories

When you want to use any of the accessories, attach the accessory to the appliance before plugging it in.

a. When you want to operate the appliance from the body control panel;

- Activate the suction motor by touching the [⏻] On/Off symbol. You may set the suction power in 9 different levels with the slider switch.

b. If you want to operate the appliance from the trigger control panel;

- Start the suction motor by pressing the [⏻] On/Off button. You may increase or decrease the suction power with the (+) and (-) buttons.

After you have completed vacuuming, stop the appliance by pressing the On/Off button on the control or by touching the On/Off symbol on the body and unplug the appliance.



1- Carpet and Hard Floor Nozzle

It is used for the daily sweeping of carpets, rugs and hard floors. You can adjust the length of the brush by pressing the latch on top of the tool.



2- Upholstery Tool

It is used for cleaning upholstered surfaces such as seats and sofas in particular. Thanks to its specially grooved design with openings, it never wears out your upholstered surfaces.



3- Circular Brush

It is used for delicate dusting operations that will be performed on natural and artificial flowers, curtains, paintings and dresses etc.



4- Crevice Brush

It is used for cleaning places which are hard to reach such as the spaces between central heating radiators and window edges.



5- Crevice tool

This tool is especially designed for cleaning the base moulding along walls and the joints of armchairs and sofas.



6- Easy Access Tool

It is used for cleaning places which are impossible to reach such as the spaces behind cupboards, wardrobes and radiators. Install the adapter head of the Inflater & Vacuuming tool (no. 21) to the telescopic tube to use this tool.



7- Inflater & Vacuuming tool

You can clean keyboards and electronics as well as inflate toys with this special tool.



8- Perfume Set

Put 3-4 drops from the fragrance set you chose into the clean water tank of your appliance. Start the engine and a wonderful fragrance will aromatize the air throughout your room. (Using other fragrances may damage the tank and the appliance.)



9- Vacuum Bag

You can perform the required cleaning by vacuuming for 3 to 4 minutes by putting things such as pillows, quilts, etc., whose interior parts you cannot be cleaned, into this special bag. Thus, the interior of your items will become free of dust and mites.

Moreover, you can reduce the volume of your vacuumed bulky materials such as quilts, bedding etc., store them in much less space for a longer time.



roboclean
Pro

Max. 150 W

Ionizing function

In order to operate the negative ion function more efficiently, remove the rear panel cover and turn the suction motor on to the 1st level. Then, activate the ionizer function by pressing the ion symbol on the touch panel or pressing the ION button on the control.



NEGATIVE (-) IONS AND THEIR IMPORTANCE IN FRESH AIR QUALITY

- Negative ions electrostatically attract the positively charged dust that form ion clusters in the air and cause them to get heavier and fall onto the nearest surface.
- This helps to reduce the presence of air-borne bacteria and fungi with its oxidation effect.
- Decrease in the occurrence of asthma and respiratory illnesses.
- Relief of fatigue, depression, nervousness and stress;
- Increase in mental clarity and work efficiency;
- Relief of migraine and headaches;
- Improvement in the pH balance of the body;
- Breathing more effectively,
- Improvement of sleep quality.
- Relief of the causing agents of allergic attacks and Hay Fever.

Cleaning and maintenance of Roboclean

! Always unplug your appliance before cleaning or maintenance

EMPTYING AND CLEANING PROCEDURE OF THE BASIN

Make sure to wipe out the remaining water from the basin before storing the machine in order to prevent corrosion inside of the motor.

Drain the water from the basin and clean it after every use. To do so, separate the body from the basin by releasing the latches on the side. Empty the dirty water. Remove the heavy dirt inside the basin. We recommend that you replace the water frequently during cleaning.

! Do not operate the appliance without water.



WARNING!

Do not forget to drain the water basin and rinse it thoroughly when you have completed the cleaning in order to avoid the formation of unpleasant odors.

The inside of the appliance may become contaminated if the instructions in the user manual are not followed.



CLEANING OF THE SEPERATOR

Always remove and clean the separator every two to three uses. Remove the separator cleaning brush from its slot on the body. Remove the separator nut with the wrench on the brush. Remove the separator and clean the inside and outside of the separator with soapy water using the separator cleaning brush. Put in back in place it by putting it on its housing after drying. Place the nut on the separator and tighten with the wrench. Do not forget to re-install the separator brush after you have completed this operation.

! Never operate your appliance without the separator.




REPLACEMENT OF THE POLLEN FILTER

Replace the pollen filter on your appliance with the auxiliary pollen filter supplied with the product after using it for 5-6 months. To change the filter, pull the tab on the filter cover and remove the cover. Replace the old filter with the new one and close the filter cover. You should replace this new pollen filter on average once a year.

! Never operate your appliance without the pollen filter.



REPLACEMENT OF THE REMOTE CONTROL BATTERY

- Only use CR123A, 3V type batteries.
- The battery in this appliance is not rechargeable. Do not try to recharge.
- Rechargeable batteries are to be removed from the appliance before being charged.
- The battery is to be inserted with the correct polarity.
- Exhausted battery is to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the battery should be removed.
- The supply terminals are not to be short-circuited.
- Keep the appliance and the battery away from children.
- The low battery indicator () will be shown on the remote control display when the battery has run out.
- You can procure a new battery from an Authorized Service Provider.



Slide the lid in direction of the arrow to open the battery slot

SERVICING OF DOUBLE - INSULATED APPLIANCE

In a double-insulated appliances, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and

knowledge of the system, and should be done only by qualified Roboclean service personal. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

Troubleshooting

PROBLEMS

CAUSES

RECOMMENDED SOLUTIONS

<ul style="list-style-type: none"> The appliance does not turn on. 	<ul style="list-style-type: none"> Power supply is not available or the appliance is unplugged. The Motor safety switch is not turned on. The cord, plug or motor may be faulty. 	<ul style="list-style-type: none"> Plug the power cord carefully into the power outlet. Open the latches and firmly reseal the main body on the basin. Contact an Authorized Service Provider.
<ul style="list-style-type: none"> Suction is not adequate. 	<ul style="list-style-type: none"> The vacuum hose may be torn or pierced. The suction line may be blocked. Separator may be dirty 	<ul style="list-style-type: none"> Replace with a new one. Check the suction line and remove any obstructions. Clean the separator.
<ul style="list-style-type: none"> Emits dust and particles 	<ul style="list-style-type: none"> Separator may be blocked or not installed correctly. No water or very low level of water inside the dirty water basin. Water inside the dirty water basin may have become very dirty. Pollen filter may have become very dirty. 	<ul style="list-style-type: none"> Clean the separator and ensure that it is installed correctly. Fill water in the dirty water basin up to the top of the measuring post. Replace the water inside the dirty water basin. Replace the pollen filter.
<ul style="list-style-type: none"> Abnormal sound, noise or vibration. 	<ul style="list-style-type: none"> Separator may be blocked or not firmly seated. Water level inside the dirty water basin may be too high. 	<ul style="list-style-type: none"> Clean the separator and ensure that it is installed correctly. Check the water level inside the basin. Drain water until it is below the upper point of the measuring post if the water level is too high.
<ul style="list-style-type: none"> Power Nozzle does not operate. 	<ul style="list-style-type: none"> Connections of the Power Nozzle may be placed incorrectly. 	<ul style="list-style-type: none"> Check if the vacuuming hose is connected to the body and if the Power Nozzle is plugged into the outlet under the trigger.
<ul style="list-style-type: none"> Brush does not rotate although the power nozzle motor operates. 	<ul style="list-style-type: none"> A foreign object may be blocking the brush. 	<ul style="list-style-type: none"> Clean the brushes and air inlet compartments.
<ul style="list-style-type: none"> Remote control does not operate. 	<ul style="list-style-type: none"> Battery may be weak. 	<ul style="list-style-type: none"> Replace the battery with a new one.
<ul style="list-style-type: none"> Appliance abruptly stopped during operation. 	<ul style="list-style-type: none"> Power Nozzle brush may be excessively filthy or a foreign object such as rope, nylon, etc., may be stuck in the brush end. In this case, the appliance will stop in order to protect the system, i.e. thermal fuse system will be activated which stops the motor. 	<ul style="list-style-type: none"> Check the end of the brush and remove any foreign objects. Then, turn off your appliance from the touch control panel on the body and restart the machine.

Contact an authorized service provider if the problem persists even after you have applied the remedies described above.



Warranty Certificate



AURA ROBOCLEAN OWNER'S

Name, Surname :

Phone Number :

Address :

Purchase Date :

AURA ROBOCLEAN'S

Appliance Serial Number :

Power Nozzle Serial Number :

Date of Invoice :

Invoice No :

AURA ROBOCLEAN DISTRIBUTOR'S

Company Name :

Address :

Phone Number :

Other Information :

AURA ROBOCLEAN SALES REPRESENTATIVE'S

Name, Surname :

Phone Number :

Signature :

Warranty Conditions

This product is manufactured for global distribution and sales.

Since the warranty conditions and periods of this type of product varies from country to country, please contact your regional distributor or seller for information concerning the applicable warranty and service policies. Please make sure you understand clearly the policies and procedures concerning the warranty. It is solely the distributor's responsibility to set up a warranty policy in compliance with the local laws and regulations. Please report your comments and complaints to the distributor or to the manufacturer and report your satisfaction and happiness to your friends as recommendation to them to know more about the excellence of Aura Roboclean.

Complies with WEEE regulations



This symbol on the product or package indicates that the appliance is not to be discarded with usual household waste. It should be delivered to the collection points for the recycling of electrical and electronic devices. You shall contribute to the protection of nature and human health when you dispose of this product correctly. Improper disposal may harm the environment and human health. You can get more information on the recycling of this product from your municipality, waste collection service or the store where you purchased this product.

